



Tongue & Groove Set

337



INST/337 v8.0

trend[®]
tool technology

Please read carefully before use

TONGUE & GROOVE CUTTER SET REF. 337

Thank you for purchasing this Trend router cutter, which should give lasting performance if used in accordance with these instructions.

The following symbols are used throughout these instructions.



Denotes risk of personal injury, loss of life or damage to the tool in case of non-observance of the instructions.




Refer to the instruction manual of your power tool.

This cutter must not be put into service until it has been established that the power tool to be connected to this unit is in compliance with 2006/42/EC (identified by the CE marking on the power tool) or UK Statutory Instruments 2008 No. 1597 – The Supply of Machinery (Safety) Regulation (identified by UKCA marking on the power tool).

INTENDED USE

This cutter is intended to be used in a fixed head routing machine (minimum 750 watts) to cut natural timber, to create a tongue

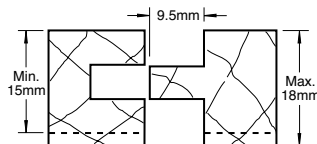

and groove joint in wood and wood based material of thickness 15mm to 22mm.

SAFETY

Please read and understand the safety points at the end of this instruction as well as the power tool instructions before use.

PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

The attention of UK users is drawn to The Provision and Use of Work Equipment Regulations 1998, and any subsequent amendments.

Users should also read the HSE/HSC Safe Use of Woodworking Machinery Approved Code of Practice and Guidance Document and any amendments.

Users must be competent in woodworking equipment before using our products.

Ensure working position is comfortable and component is clamped securely. Please keep children and visitors away from tools and work area. All tools have a residual risk, so must therefore be handled with caution.

Attention should be made to the HSE's Safe Use of Vertical Spindle Moulding machines Information Sheet No. 18 and any revisions.

ITEMS REQUIRED

- Router with suitable collet fitted.
- Router table.
- Hand tools.
- 13mm A/F spanner.



When using stacked tooling (multi-blade, block and groover etc.) on a spindle arbor, ensure that the cutting edges are staggered to each other to reduce the cutting impact. **NOTE: Diagrams show cutting edges not staggered for clarity.**


ITEMS ENCLOSED & DESCRIPTION OF PARTS

- A. Arbor x1
- B. Nut 13mm A/F x1
- C. Groover 41mm dia. 6.3mm kerf x1
- D. Groover 41mm dia. 10.0mm kerf x1
- E. Bearing 22mm dia. x1
- F. Spacer 6.0mm x2
- G. Shim 0.1mm x1
- H. Shim 0.05mm x2
- I. Washer 1.0mm x1
- J. Spacer 3.0mm x1
- K. Shim 0.5mm x2
- L. Instructions x1



The tool is factory set and the shims/spacers may differ from the list above. Some shims/spacers can be found assembled on the tool.

Tongue Set-up as supplied

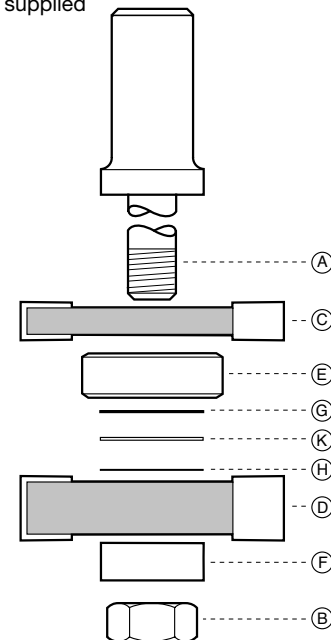

Before using cutter please ensure it is correctly assembled and locking nut is fully tightened to correct torque settings.

PTO

ENVIRONMENTAL PROTECTION

Recycle raw materials instead of disposing as waste.

Packaging should be sorted for environmental-friendly recycling. The product and its accessories at the end of its life should be sorted for environmental-friendly recycling.

WARRANTY

The cutter carries a manufacturer's warranty in accordance with the conditions on our website **www.trend-uk.com**


© Trend Tool Technology Ltd.

2014, 2015, 2025 E&OE


® All trademarks acknowledged

Trend Tool Technology Ltd.
Watford, WD24 7TR, England
www.trend-uk.com

EU Importer:
Trend Tool Technology Ltd.
Ground Floor, Two Dockland Central,
Guild Street, North Dock, Dublin 1,
D01 K2C5, Ireland
technical@trend-eu.com
www.trend-eu.com

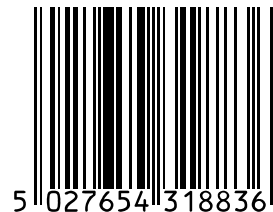

Groove Set-up

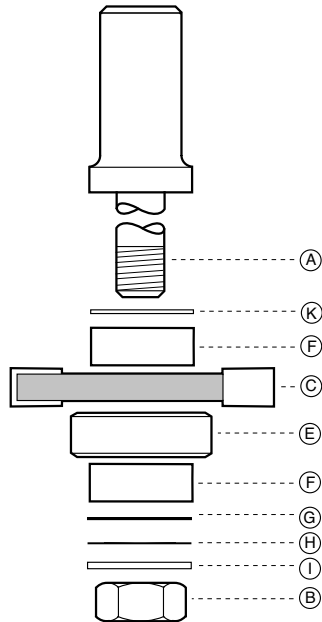

OPERATION



Carefully remove the protective wax from the cutter and dispose. Insert the cutter shank into the collet at least all the way to the marked line indicated on the shank. This ensures at least 3/4 of the shank length is held in the collet.

The set is supplied in tongue set up. However, remember to machine the groove first.

Changes in tightness can be achieved by adding or removing shims. This is most important after resharpening.

The ball bearing on each set up will automatically give the correct depth of cut.

When re-assembling follow the sequence of the two diagrams.

Ensure groovers are assembled the correct way round, i.e. to match the spindle rotation.

Prepare the timber to the required thickness, minimum 15mm and maximum 22mm.




Recommended speed 18,000 rpm.

Groove Set Up



Undo nut with a 13mm A/F spanner, remove all parts and reassemble as per the groove set up diagram. Set the cutter to the desired height against the timber (this will be dependant on the thickness of the timber).

The bearing will automatically give the correct depth of cut. If a side fence is not used, a lead on piece will be required.

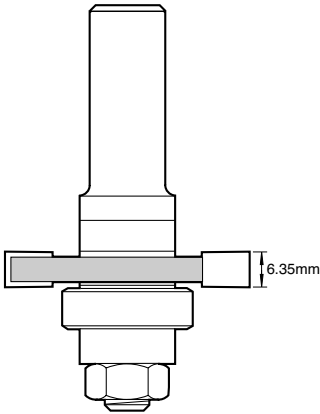


Tongue Set-up



Undo the nut with a 13mm A/F spanner, remove all parts and reassemble as per the tongue set up diagram, do not adjust the height of the arbor. Groovers C and D should be at 90° to each other to reduce the cutting impact. The height of the cutter will need to be adjusted and then checked before machining the groove.

The joint produced will be slightly loose to allow for ease of assembly of the finished joint. For a tight joint extra shims G and H should be added either side of the bearing in the tongue set up.

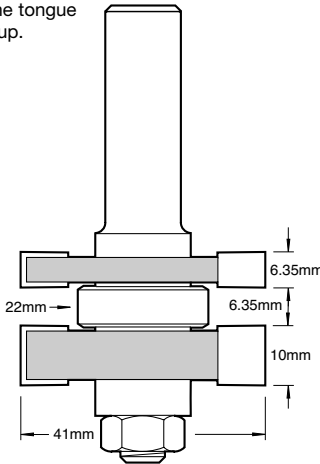

SPARE PARTS

Please use only Trend original spare parts and accessories.

Item	Qty.	Desc.	Ref. (1 off)
A	1	Arbor 8mm shank Arbor 1/2" shank	SP-337B SP-337A
B	1	Arbor nut	ANUT/33/30
C	1	Groover 6.3mm kerf	SP-34/70TC
D	1	Groover 10mm kerf	SP-34/74TC
E	1	Bearing 22mm dia.	BB22
	1	Spacer set	SPACER/8
L	1	Instructions	INST/337

MAINTENANCE



Continual satisfactory operation depends upon proper tool care and regular cleaning.

Cleaning

- Ensure clamping surfaces are cleaned to remove dirt, grease, oil and water.
- Remove resin build-up regularly.
- Apply a rust protector to shanks.

Lubrication

- Use a PTFE dry lubricant spray on tool to increase cutting edge life.

Storage

- Always return cutter to its packaging after use.

Safety Points

1. Disconnect power tool attachment from power supply when not in use, before servicing, when making adjustments and when changing accessories such as cutters. Ensure switch is in "off" position and cutter has stopped rotating.
 2. Read and understand instructions supplied with power tool, attachment and cutter.
 3. Current Personal Protective Equipment (PPE) for eye, ear and respiratory protection must be worn. Keep hands, hair and clothes clear of the cutter.
 4. Before each use check cutter is sharp and free from damage. Do not use if cutter is dull, broken or cracked or if any damage is noticeable or suspected. Only use tools for woodworking to EN847 safety standard. Ensure cutting tool is suitable for application.
 5. The maximum speed (nmax) marked on tool or in instructions or on packaging shall not be exceeded. Where stated, the speed range should be adhered to.
 6. Insert the shank into the router collet at least all the way to the marked line indicated on the shank. This ensures at least 3/4 of the shank length is held in collet. Ensure clamping surfaces are clean.
 7. Check all fixing and fastening nuts, bolts and screws on power tool, attachment and cutting tools are correctly assembled, tight and to correct torque setting before use.
 8. Ensure all visors, guards and dust extraction is fitted.
 9. The direction of routing must always be opposite to the cutter's direction of rotation.
 10. Do not switch power tool on with the cutter touching the workpiece.
 11. Trial cuts should be made in waste material before starting any project.
 12. Repair of tools is only allowed according to tool manufacturers instructions.
 13. Do not take deep cuts in one pass, take shallow passes to reduce the side load applied to the cutter.
 14. User must be competent in using woodworking equipment before using our products. Dress properly, no loose clothing/jewellery, wear protective hair covering for long hair.
 15. Consider working environment before using tools. Ensure working position is comfortable and component is clamped securely. Keep proper footing and balance at all times. Check work area for obstructions. Keep control of power tool at all times.
 16. Please keep children and visitors away from tools and work area.
 17. All tools have a residual risk so must therefore be handled with caution.
 18. Only use Trend original spare parts and accessories.
- If you require further safety advice, technical information, or spare parts, please call Trend Technical Support or visit www.trend-uk.com

Our policy of continuous improvements mean that specifications may change without notice. Trend Tool Technology Ltd. cannot be held liable for any material rendered unusable, or for any form of consequential loss.