



4 Hour Rechargeable Battery AIR/4



INST/AIR/4 v3.0

trend[®]
routing technology

Please
read carefully
before use

4 HOUR RECHARGEABLE BATTERY REF. AIR/4

Thank you for purchasing this Trend product which should give lasting performance if used in accordance with these instructions.

The following symbols are used throughout these instructions.



Denotes risk of personal injury, loss of life or damage to the tool in case of non-observance of the instructions.



Denotes risk of electric shock.

INTENDED USE

This accessory is intended to be used with the Trend Airshield Air Circulating Face Shield.

SAFETY

Please read and understand the safety points at the end of this instruction as well as the power tool instructions before use.


PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

Users must be competent in using woodworking equipment before using our products.

Ensure working position is comfortable. Please keep children and visitors away from tools and work area. All tools have a residual risk, so must therefore be handled with caution.

BATTERY PACK REMOVAL AND REPLACEMENT

Release the cover by lifting the left and right sides to disengage the lugs then pull forward and lift. The battery housings are located on either side of the main filter. Use two fully charged battery packs for eight hours duration or one battery pack for four hours duration. Plug a fully charged battery pack into the connector and push it down into the housing. Repeat for the opposite side if two battery packs are required. Lower the cover and push backwards to engage the lugs into the holes. Ensure the lugs are fully engaged in the holes.

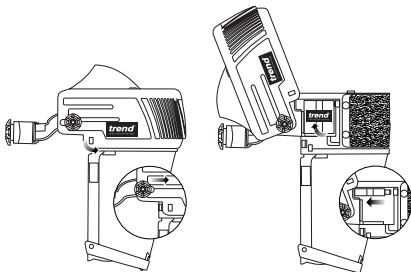

RECHARGEABLE BATTERIES AND THE ENVIRONMENT



This unit uses Nickel-Metal Hydride (Ni-MH) batteries. When the battery pack needs replacing, we recommend the following:-

- Discharge the energy from the batteries by running the batteries down completely, and then remove them from the respirator.
- Ni-MH cells are recyclable; so do not throw them away with your household waste. They may end up in an incinerator or landfill, which must be avoided.
- Instead, take the batteries to a Trend Service Agent, your local distributor or a local recycling station. If necessary, contact your local municipality for disposal information. The collected batteries will be disposed of properly and/or used for recycling purposes.

ENVIRONMENTAL PROTECTION

Recycle raw materials instead of disposing as waste.

Packaging should be sorted for environmental-friendly recycling.

The product and its accessories at the end of its life should be sorted for environmental-friendly recycling.

GUARANTEE

All Trend products guaranteed against any defects in either workmanship or material, except products that have been damaged due to improper user or maintenance.

© Trend Machinery & Cutting Tools Ltd. 2014 E&OE

© All trademarks acknowledged

GB Trend Machinery & Cutting Tools Ltd.

Tel: 0044(0)1923 249911
technical@trendm.co.uk
www.trend-uk.com

USA Trend Routing Technology Inc.

Tel: 336 292 5051
technical@trend-usa.com
www.trend-usa.com



RECYCLABLE