



Rechargeable Angle Twist Torch TCH/AT/B75R



INST/TCH/AT/B75R v1.0

Please
read carefully
before use

trend[®]
routing technology

ANGLE TWIST TORCH REF. TCH/AT/B75R

Thank you for purchasing this Trend product, which should give lasting performance if used in accordance with these instructions.



Denotes risk of personal injury, loss of life or damage to the tool in case of non-observance of the instructions.

INTENDED USE

This accessory is intended to be used as a torch only. The torch has Low, High and UV light functions.

SAFETY

Read and understand the instruction sheet carefully before using. This is a sensitive precision tool. Do not disassemble or drop it. Please note the magnets in the base. Store out of reach of children. Do not use as a toy or as a weapon.

PLEASE KEEP THESE INSTRUCTIONS IN A SAFE PLACE.

Users must be competent in using woodworking equipment before using our products. Consider working environment before using tools. Ensure working position is comfortable and component is clamped securely. Please keep children and visitors away from tools and work area. All tools have a residual risk so must therefore be handled with caution.

CE DECLARATION CONFORMITY



This product conforms with EMC Directive 2014/30/EU.

OPERATION

Remove battery safety tab before use.

Mode 1 Short press: Low – High – Off

Mode 2 Long press: UV – Off – Mode 1

When the torch is off or on Mode 1, long press the button to turn to Mode 2.

The switch indicator will show green if battery is more than 3.3V and it will show red if battery falls below 3.0-3.3V.

If the battery is less than 3V, the indicator will turn red and flash for 2 minutes until it goes out.




Remove battery safety tab before use.

Charging

The battery has a safety tab fitted for transit, this must be removed before use. To charge battery use supplied USB cable to connect with USB socket adaptor (not supplied).

The switch indicator will show red, which means it is charging and will turn to green when fully charged. Battery charge time can take 6 to 8 hours.

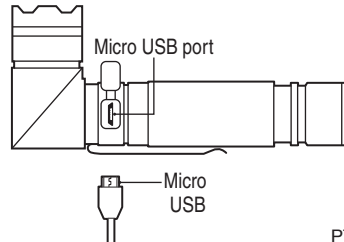

PTO

GUARANTEE

All Trend products are guaranteed against any defects in either workmanship or material, except products that have been damaged due to improper use or maintenance.

© Trend Machinery & Cutting Tools Ltd. 2018 E&OE

® All trademarks acknowledged

Trend Machinery & Cutting Tools Ltd

Odhams Trading Estate St Albans Road
Watford WD24 7TR England

Tel: 0044(0)1923 249911

technical@trendm.co.uk

www.trend-uk.com



5 027654 059029 >



MAINTENANCE

Please use only Trend original spare parts and accessories.

Please do not open the fixed head parts, otherwise there is a risk to damage the light and invalidate the warranty.
Please use a good quality battery.

Cleaning

- Clean with a cloth.
- We advise that the current contact pin and surface are often cleaned to ensure torch functions normally, especially if the torch light flashes on its own.

Storage

- Take out the battery when you are going to power off for a long time otherwise the battery may become damaged.

TROUBLESHOOTING


| Problem | Possible Cause | Solution |
|--------------------------|----------------------|---|
| Torch does not light up. | Battery has run out. | Please recharge battery or fit new battery ensuring correct polarity. |
| Torch does not light up. | Contact pin dirty. | Please clean with alcohol wipes. |

Battery Care

WARNING!

Check for correct polarity (+/-).
KEEP OUT OF REACH OF CHILDREN.
Do not swallow. If swallowed, seek medical advice at once. Do not disassemble, recharge or dispose of in fire. Do not mix used and new batteries, different brands or types: may explode, leak and cause damage.
Remove the battery before storing the instrument, store separately to avoid short circuit. Remove exhausted and expired batteries promptly.
The product is designed to use 18650-size battery only.
Do not throw 18650 batteries into fire or water. Please put in correct polarity when charging.

We suggest charging the battery every three months at least to protect battery life if you plan to store for a long period of time.

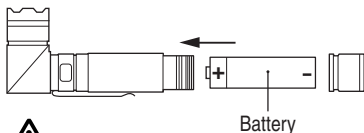

Li-ion battery needs to be charged in every 3-6 months to function properly.

UV Light

UV wave length: 395nm.

Caution: Avoid permanent UV radiation to the skin or eyes.

IMPORTANT!

Caution LEDs are extremely bright and direct exposure to eyes may cause injury. For eye protection, do not look directly into the light.



WARNING!
Intense beam of light.

ENVIRONMENTAL PROTECTION

Recycle raw materials instead of disposing as waste.
Packaging should be sorted for environmental-friendly recycling.



Separate collection. This product must not be disposed of with normal household waste.

Household User

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product. Please call Trend Customer Services for advice as to how to dispose of unwanted Trend electrical product in an environmentally safe way or visit www.trend-uk.com

Business User

Please call Trend Customer Services for advice as to how to dispose of unwanted Trend electrical product in an environmentally safe way or visit www.trend-uk.com

Batteries and the Environment



This unit uses Li-ion batteries. When battery pack needs replacing, we recommend the following:
Discharge the energy from the from the tool.

Lithium Ion battery cells are recyclable: so do not throw them away with your household waste. They may end up in an incinerator or landfill, which must be avoided. Instead, take the batteries to a Trend Service Agent, your local Dealer or a local recycling station. If necessary contact your local municipality for disposal information. The collected batteries will be disposed of properly and/or used for recycling purposes.

The attention of UK users is drawn to The Provision and Use of Work Equipment Regulations 1998, and any subsequent amendments.

Users should also read the HSE/HSC Safe Use of Woodworking Machinery Approved Code of Practice and Guidance Document and any amendments. Users must be competent in using woodworking equipment before using our products.

Our policy of continuous improvements mean that specifications may change without notice. Trend machinery & Cutting Tools Ltd. cannot be held liable for any material rendered unusable, or for any form of consequential loss.