

WIRING DIAGRAM T10 & T11 115v & 230v v1.0 07/2005			
No.	Qty.	Desc.	Ref.
1	1	2 Core Cable only 115V UK T10L & T11L	WP-T10L/005
		2 Core Cable with Plug 230V UK T10 & T11	WP-T10/005
		2 Core Cable with Plug 230V EURO T10 & T11 EURO	WP-T10EUR/00
2	1	Switch	WP-T10E/003
3	1	Lead Switch to Speed Control (Red x 105mm M/F - F)	WP-T10/106
4	1	Lead Switch to Speed Control (Red x 110mm F - F)	WP-T10/105
5	1	Lead Switch to Field Coil (Red x 95mm F - M)	WP-T10/024
6	2	Lead Field to Bush 115V (Yellow x 95mm) T10L & T11L	WP-T10L/009
		Lead Field to Bush 230V (Yellow x 175mm) T10 & T11	WP-T10/009
7	1	Field Coil 115V T10EL & T11EL	WP-T10EL/002
		Field Coil 230V T10E & T11	WP-T10E/002
8	2	Carbon Brush 115V	WP-T10EL/004
		Carbon Brush 230V	WP-T10E/004
9	1	Lead Speed Control to Field (Red x 100mm F90 - M)	WP-T10/010
10	1	Speed Control Board 115V T10EL & T11EL	WP-T10EL/103
		Speed Control Board 230V T10E & T11	WP-T10E/103
11	1	Capacitor	WP-T10/089



Trend Machinery & Cutting Tools Ltd.
Odhams Trading Estate St Albans Road Watford WD24 7TR
Tel: 01923 212928 Fax: 01923 228656
Email: enquiry@trendm.co.uk
www.trendmachinery.co.uk



